



**THANK YOU FOR BUYING AN INDESIT PRODUCT**  
 In order to receive a more complete assistance, please register your product on [www.indesit.com/register](http://www.indesit.com/register)



**Before using the appliance carefully read the Safety Instruction.**

 
## PRODUCT DESCRIPTION

### FIRST TIME USE

Wait at least two hours, after the installation, before connecting the appliance to the power supply. Connect the appliance to the power supply it starts the operation automatically. The ideal storage temperatures for the food are preset in the factory.

After turning the appliance on, you must wait for 4-6 hours for the correct storage temperature to be reached for a normally filled appliance.

### CONTROL PANEL

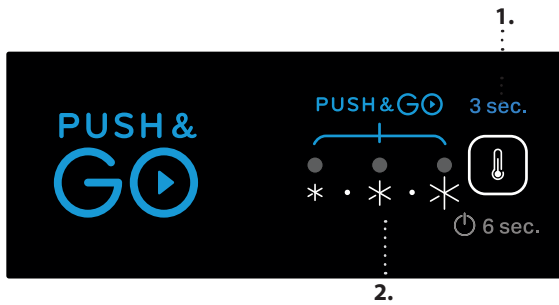

1. On/Stand-by
2. Freezer and refrigerator compartment temperature


#### ON/STAND-BY

Press the button for 6 seconds to turn the appliance off. In Stand-by mode the light in the refrigerator compartment does not turn on. Press the button again briefly to reactivate the appliance.







Note: this does not disconnect the appliance from the power supply.

#### FREEZER AND REFRIGERATOR COMPARTMENT TEMPERATURE

The three LED indicators indicate the refrigerator compartment set temperature.


It is possible to set a different temperature of the appliance with the  button.

The following adjustments are possible:

LEDs lit	Set temperature
	LEAST COLD
	
	MEDIUM
	
	COOLEST TEMP
	FAST FREEZING
* * *	



 
#### PUSH&GO FUNCTION

To activate the fast temperature recovery function to better preserve your food after a large food shopping, turn on the "Push and Go" by continuously pressing the button  until the 3 icons flash green and then stay constant.

The function automatically turns off after 26 hours and the temperature returns to the previous setting when the function is turned on.

 
To turn the function off manually, press the button.

Note: avoid a direct contact between the fresh food and the food that is already frozen.

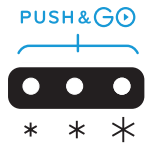
 
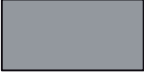


\* Available only on certain models


# HOW TO STORE FRESH FOOD AND BEVERAGES

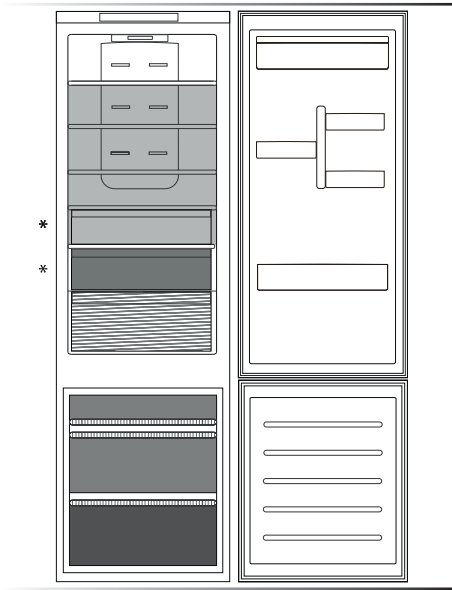


## Legend

-  **MINOR COOL ZONE**  
Suggested for the storage of tropical fruit, cans, drinks, eggs, sauces, pickles, butter, jam
-  **COOL ZONE**  
Suggested for the storage of cheese, milk, daily food, delicatessen, yogurt
-  **COOLEST AREA**  
Suggested for storage of cold cuts, desserts, meat and fish.


---

-  **FRUIT & VEGETABLE DRAWER**

---

-  **FREEZER DRAWERS**

---

-  **FREEZING ZONE DRAWER**  
(Max cool zone)  
Suggested to freeze fresh/cooked food

*The load limits are determined by the particular construction (baskets, containers, flaps, drawers, shelves, etc.), or the load limits are determined by natural load limits.*

 
## REFRIGERATOR COMPARTMENT

### Multiflow Air Distribution

The multiflow helps to distribute evenly the cold air in the cavity for a better food preservation. Foods can be placed on any shelf of the appliance. Please pay attention to not obstruct the air distribution vents thus ensuring its free movement.

### Humidity control\*

Open the humidity regulator (position B) if you want to store food in a less humid environment like fruit, or close it (position A) to store food in a more humid environment like vegetable.

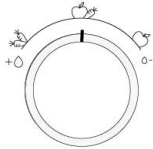

### Multi Fresh Zone

3 temperature selection to optimally preserve: Meat/Fish; Dairy; Fruit/Veggies, offering also extra storage space for your fresh greens.

Settings:

 
**LOW** = Meat and Fish

**MID** = Dairy Food (Cheese and Yogurt)

**HIGH** = Fruits and vegetables

For the correct functioning of the "Multi Fresh zone" drawer, it is necessary that:

- the appliance is turned on
- one of the following special functions is not selected: Standby, Cooling-Off, Vacation (in this case, remove the food contained in it).

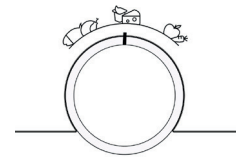

\* Available only on certain models

## Light system



This product contains a light source of energy efficiency class G

## FREEZER COMPARTMENT

### Total No Frost system

The Total No Frost system effectively prevents ice formation, avoiding the hassle of manual defrosting both in freezer and fridge cavity. Its ventilation system provides perfect circulation of cold air in both cavities thus avoiding ice builds up.

### Ice cubes\*

Fill 2/3 of the ice tray with water and put it back in the freezer compartment.

Do not use sharp or pointed objects to remove the ice under any circumstances.

The quantity of fresh food that can be frozen in 12 and 24 hours is written on the rating plate.

### Easy access tray\*

Freezer tray is useful to easily access frequently used products, freeze or simply store leftovers or small items.

## GENERAL INFORMATION

The drawers, baskets and shelves should be kept in their current position unless otherwise specified in this quick guide.

The light system inside the refrigerator compartment uses LED lights, allowing for better lighting than with traditional light bulbs, as well as for very low energy consumption.

### DISPOSAL

Doors and lids of the refrigeration appliance should be removed before disposal in the landfill, to avoid children or animals getting trapped inside.

### Fast Freeze Pad (Alu PAD)\*

The metallic panel help to freeze faster the food.

For an easy cleaning the metallic panel can be removed, lifting it up from the left angle.

### Fresh Pad\*

The Fruit & vegetable drawer is equipped with the Hygiene grid.

Thanks to the special design of this component fruits&vegetable are not in contact with the natural leakages (as drip loss and moisture from vegetables) that drop below the Hygiene grid. The Hygiene grid is treated with Microban SilverShield® technology that reduces the harmful bacteria by up to 99.9% on the surface of the crisper grid, for enhanced preservation of fruit and vegetables\*\*. The hygiene grid can be removed to be washed when dirty, simply raising it and pulling it out. It can be simply washed by hand, with water only or with common neutral detergents for dishes. It can be washed also in the dishwasher. After cleaning, dry before putting it back into place.

### REMOVING THE DRAWERS


Pull the drawers outwards as far as they will go, lift them up and remove them. To get more volume, the freezer compartment can be used without the drawers.

Make sure that the door is closed properly after putting the food back on the grilles/shelves.

\* Available only on certain models

\*\* Independently tested by IMSL (Industrial Microbiological Services Ltd, UK) using ISO 22196

## TROUBLESHOOTING

What to do if...	Possible reasons	Solutions
The control panel is switched off, the appliance does not work.	There may be an appliance power supply problem.	Check that: <ul style="list-style-type: none"> <li>• there is not a power outage;</li> <li>• the plug is properly inserted in the socket and any bipolar power switch is in the correct position (this enables the power supply to the appliance);</li> <li>• the household electrical system protection devices are efficient;</li> <li>• the power cable is not damaged.</li> </ul>
	The appliance could be in On/stand by mode.	Turn the appliance on by briefly pressing the  button (see On/Stand-by function).
The inside light does not work.	The light may need replacing.	Contact the Authorized service center.
	The appliance could be in On/stand by mode.	Activate the appliance with the button 1.
The temperature inside the compartments is not low enough.	There could be various causes (see "Solutions").	Check that: <ul style="list-style-type: none"> <li>• the doors close properly;</li> <li>• the appliance is not installed near a heat source;</li> <li>• the set temperature is adequate;</li> <li>• the circulation of air through the vents at the bottom of the appliance is not obstructed (see installation section).</li> </ul>
There is water on the bottom of the refrigerator compartment.	The defrost water drain is blocked.	Clean the defrosting water drain (see section "Cleaning and Maintenance").
Excessive amount of frost in the freezer compartment.	The door to the freezer compartment is not closed properly.	Check that there is nothing preventing the door from closing properly. <ul style="list-style-type: none"> <li>• Defrost the freezer compartment.</li> <li>• Make sure the appliance has been correctly installed.</li> </ul>
The front edge of the appliance that the door gaskets seal against is hot.	This is not a defect. It prevents condensation from forming.	No solution is necessary.
One or more green symbols are flashing continuously and it is not possible to change the temperature set.	Malfunction alarm. The alarm indicates a fault in a technical component.	Contact Technical Assistance Service.
The temperature of the refrigerator compartment is too cold.	<ul style="list-style-type: none"> <li>• The set temperature is too cold.</li> <li>• A large amount of fresh food may have been placed in the freezer compartment.</li> </ul>	<ul style="list-style-type: none"> <li>• Try to set a less cold temperature.</li> <li>• If fresh food has been placed in the freezer compartment, wait until it has fully frozen.</li> <li>• Turn off the fan (if present) following the procedure described in the paragraph "FAN".</li> </ul>

\* Available only on certain models



**Policies, standard documentation, ordering of spare parts and additional product information can be found by:**

- Visiting our website [docs.indesit.eu](https://docs.indesit.eu) and [parts-selfservice.whirlpool.com](https://parts-selfservice.whirlpool.com)
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.

The model information can be retrieved using the QR-Code indicated on the energy label. The label also includes the model identifier that can be used to consult the <https://eprel.ec.europa.eu> database portal.

